

FACT SHEET 6 BOUNCY CASTLES AND INFLATABLE DEVICES

Permission to use bouncy castles and other inflatable devices shall be sought from the Parks Operations Manager prior to the event.

Bouncy Castles and other inflatable devices may not be used during rain, high winds, snow or any condition found to be unsuitable by the Parks Operations Manager.

The equipment is to remain securely anchored at all times during outdoor use.

Users must be supervised at all times by at least two adults who must control the number and type of people using the facility at any one time. All users must remove all footwear (except socks) and any other hard, sharp or dangerous objects (such as buckles, pens, purses, badges etc) prior to entering the inflatable. Adult supervisors should use whistles to stop any dangerous activities and must ensure the safety matting at the points of entry/exit are in the correct position at all times.

Any person suspected of being intoxicated through drink or drug use must be denied access.